MATWORKS
PROTECT EVERY STEP

Website: www.thematworks.com
Phone: 833.628.9757
Mail: orders@thematworks.com

Installation and Maintenance

GLUE-DOWN CARPET TILES

LAYING:

- Before laying, it is recommended the tiles are stored at room temperature 60°F-70°F (15°C-20°C).
- The tiles can be loose laid on flat, dry floors free from impurities such as oil, grease etc. Cracked floors should be filled, and uneven floors covered with hardboard. Dusty floors should be primed.
- Because of the high insulation value of these tiles, it is not recommended they be laid when underfloor heating systems are in use.
- Where tiles are to be used beneath caster chairs, tiles should be fully secured.
- The tiles may be laid by marking a cross in the centre of the room and working outwards from this, the marker cross may be moved to facilitate the use of full tiles in doorways etc.
- Tiles must be laid by turning alternate tiles through 90 degrees to obtain a checker pattern. The pile direction is indicated by an arrow on the back of each tile.
- Only tiles with the same batch number should be laid together.

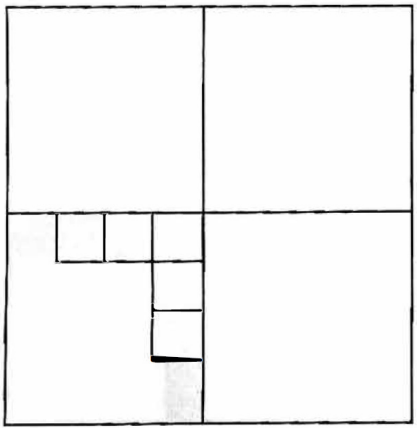

The tiles may be laid by marking a cross in the centre of the room and working outwards from this.

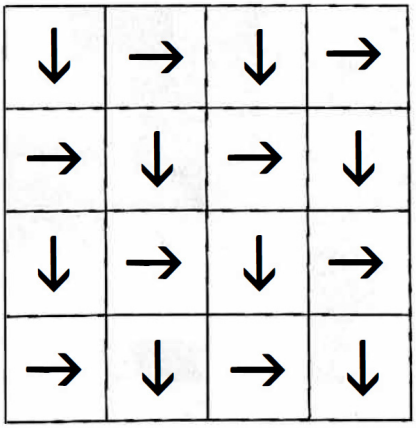

Tiles must be laid by turning alternate tiles through 90 degrees to obtain a checker pattern.

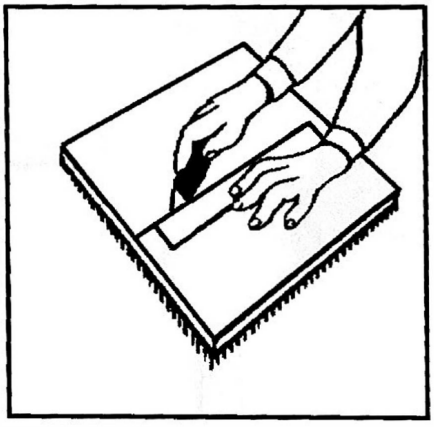

The tiles may be cut using a sharp box cutter or X-Acto knife.

MAINTENANCE:

- Traffic paths can be avoided by interchanging the tiles as necessary.
- Use a suction type of vacuum cleaner for daily maintenance.
- Spillages and stains can be treated by lifting tiles and washing them under the tap with detergent or other proprietary cleaning agents, the water will quickly drain from the tile if left on edge after which it can be replaced.
- Periodic shampooing and cleaning by a professional cleaning company should be carried out to keep the tiles in good condition.
- Do not use petrol or similar solvent product.