LAKESIDE®
4900 West Electric Avenue ● West Milwaukee WI 53219 ● 800-558-8565
414-902-6400 ● info@eLakeside.com ● www.elakeside.com

Ergo-One® Utility Carts

HANDLE ASSEMBLY INSTRUCTIONS

For Use On Models:
6600, 6610, 6800, 6810
6820, 6830

Note!
For Models 6600 and 6800, assemble casters before handle assembly.

Parts Included

Key	Description	Quantity
1.	Handle	1 ea.
2.	Screw #10 Hex	4 ea.
3.	Stop Nut #10 Hex	4 ea.

Tools Required:
Slotted Screw Driver
Pliers or Adjustable Wrench

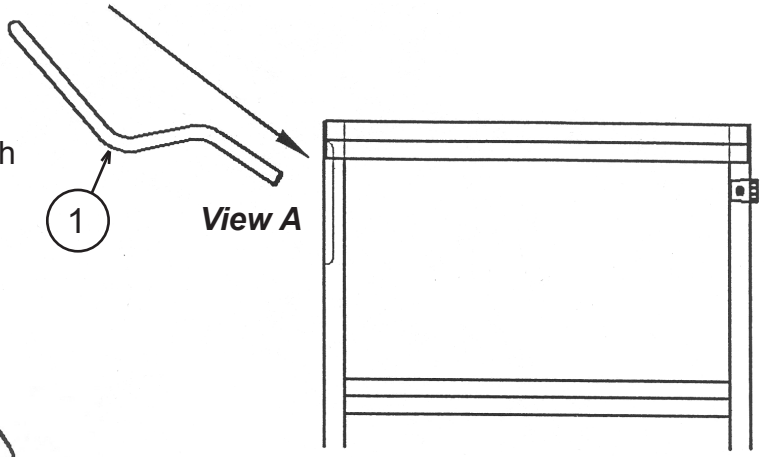

View A

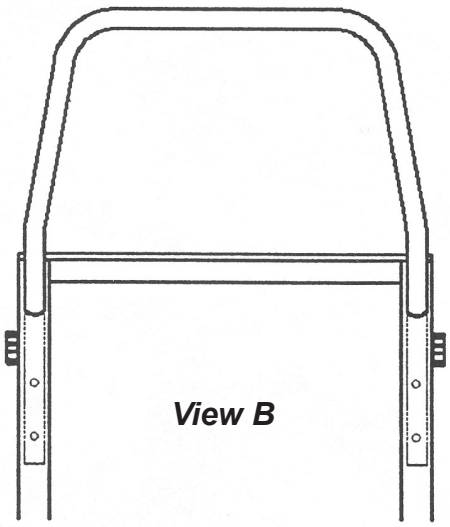
View B

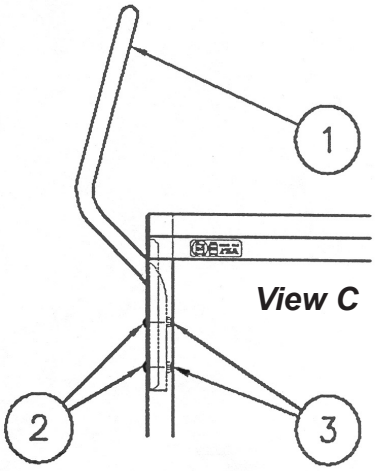

View C

1. Position the handle through slotted holes in legs, as shown in View A.

2. Tip the handle upward to align the mountong holes in the handle with the mounting holes in the legs, as shown in Views B and C.

3. Install screws from the outside of the legs though the handle holes (View C). Align and install all four screws before fastening and tightening stop nuts.

4. Fasten stop nuts and tighten all screws and nuts.