MATWORKS
PROTECT EVERY STEP

Installation Instructions
PowerLinks

PREPARATION, MATERIALS, & TOOLS

PREPARATION

- Verify the store number on the packaging matches the store number you are currently installing at.
- Be sure to unroll the PowerLinks matting 24 hours prior to installation or given enough time until the matting is lays completely flat.
- Confirm all materials have been provided.

TOOLS

- Broom, mop, hand scrub brush, and scraper
- Wet/dry vacuum (shop vac)
- Utility knife
- Carpenter's chalk line
- Hammer
- Caulking gun
- Power hammer drill
- Power screwdriver
- Several 1/4" masonry drill bits

MATERIALS

- Mat sections
- Mat retainers
- Screws adn sleeves
- Plastic transitions
- Tubes of adhesives

INSTALLATION

1. (A) Clean and scrape the floor or recess where the system will be installed.

   (B) Measure all four sides (A,B,C,D) of the chart storage area, both horizontally and vertically to verify overall size.

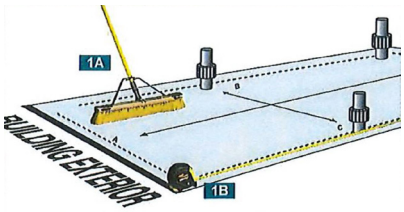

2. (A) On a flat surface with both sections together, ensure the mat sections align properly and all seams line up vertically on both sides. Tap a straight chalk line to ensure a proper fit for the first cut based on the measurement from 1B.

   (B) Cute both mat sections as marked to fit between the walls.

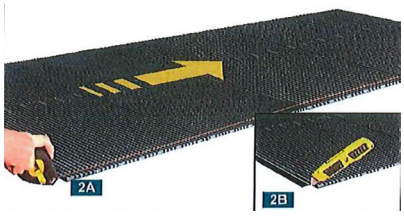

3. Lay the first mat section out, starting at the exterior door thresholds.

   Position mat section and make the necessary cuts around the cart post. Fit the first mat section so that it is against the door threshold, walls, and posts.

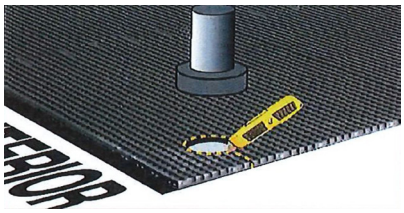

4. Roll the ends of the mat section back to clip the mat retainers to the bottom of the mat section.

   Refit the mat section back in place along the walls, thresholds, and posts. **Refer now to step 6 to secure the mat retainers.**

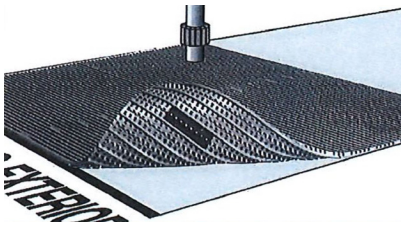

5. Lay the second mat section out, starting at the end of the first mat. Position mat section and make the necessary cuts around the cart posts.

   Push all the matting to fit tight.

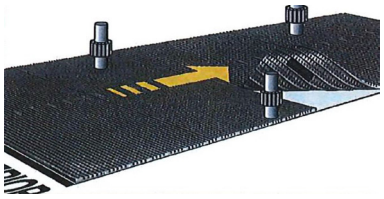

6. **IMPORTANT:** Confirm all mat retainers are securely clipped to the mat sections.

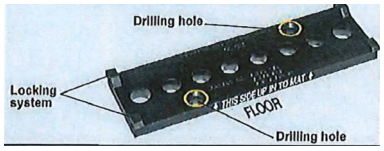

7. Using the mat retainer holes as a guide, carefully drill holes for the mat retainers. Drill directly through the mat sections and retainer holes to maintain proper alignment and placement.

   While drilling, use the wet/dry vac to vacuum the dust.

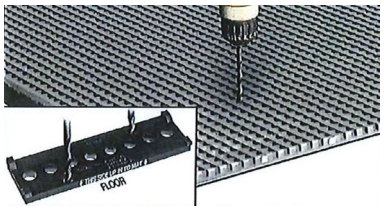

8. Roll the ends back and vacuum any remaining dust, then hammer the blue screw sleeves into the holes. Be sure to hammer them all the way in to ensure the mats don't lift up.

9. Lay the mat section back down. Drive the screws directly through the mat sections and retainers into the sleeves using a torque meter screw driver.

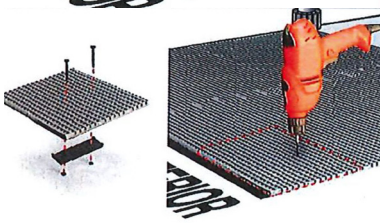

10. Vacuum with the wet/dry vacuum and mop the whole area to remove all concrete dust. Use a hand dust brush to clean the tough dust.